
# Instruction Manual



# **LED** Tunnel light

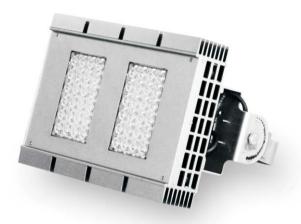

#### Check and attention before usage

At first please verify the LED light is intact and the lens is not damaged. Switch ON power to check for malfunction such as No-Light, Flashing or other defects. In case of any defect please refrain from purchasing the light and ask the distributor for replacement.



Only trained and experience personnel should undertake installation and start up. Please read the installation manual prior installation. The company holds no responsibility for damages and accidents caused due to failure to adhere to the operating procedure, attentions and warnings.

## Application


The LED light may be installed in variety of applications like-any kind of Tunnels, Toll Gates, Elevated bridge, Square, Playing field/area, advertisement/billboards & building lighting etc. Please contact us for any special illumination requirements.

#### • Featured Functions

- A.Rectangular beam pattern design, realized high intensity, high uniformity and eliminate glare:
- **B**. Modular design, easy to maintain, long life, low maintenance cost;
- C.External waterproof power and drive, High IP rating;
- D. High brightness, low power consumption, stable LED, safe to use;
- **E**. High Lighting efficiency, tremendous energy saving, green and environment friendly;
- **F.**Convenient Lighting angle adjustment, fixed-pitch distance is adjustable and easy to install and alter.

# ◆ LED lamp dimension specification

LED lamp dimension: 345x320x250mm.

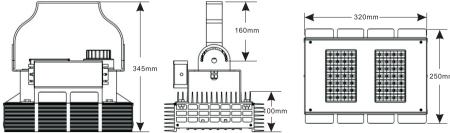

(All the pictures are only for your reference, please prevail in kind)



#### **LED**Tunnel light



## Technical Parameters

Input Voltage	100 - 240VAC
Frequency Range	50-60Hz
Power Factor	> 0.95
Total Harmonic Distortion (THD)	< 15%
Power Efficiency	≥ 90%
Led Working Voltage	48VDC
LED consumption	50W
Subtotal Lamp's power consumption	60W
Light fixture Luminous Efficiency (lm/w)	≥ 70 lm/w
Color temperature (CCT)	PW:5000-5800K; WW:4000-4500K
Color index (CRI)	>65
Junction Temperature(TJ)	$60~\%~\pm1.0\%$ ( Ta= $25\%$ ,without wind )
Working temperature	-30 ℃~50 ℃
Working Humidity	10 % ~ 90 % RH
Working life	>50,000Hrs
Light Body & lampshade Material	Aluminum Alloy and PC
Net weight (includes accessories)	9.2kg
IP Rating	IP 65
The suggested height	5m-6m (Tunnel)
( For detai	l parameter, please refer to the specification)

(For detail parameter, please refer to the specification)




#### Please use in the range of specified voltage

Higher or lower voltage over extended period of time results in overheating and damage

#### **LED** Tunnel light



#### Options for Lamp Accessories

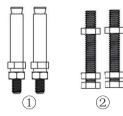


#### Options for tap bolt

①Expansion Bolts: Apply to fixing Light on the wall


②M12\*80Bolts: Apply to fixing light on metallic bracket

Options for Junction boxOptional Junctional Boxes may be used for specific installation requirement. Please refer the connection method as detailed.

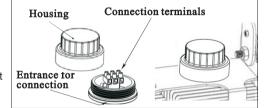


#### Installation instruction

1. Open the package box, take out the Tunnel light;

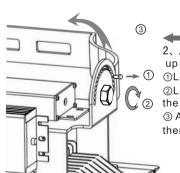

- 2. Adjust angle of bracket for easily picking up lamps
- ①Loosen adjustable bolts
- ②Loosen bolts of bracket till to be able to turn the bracket
- 3 Adjust the bracket and lamp angle properly, then lock the adjustable bolts and bolts of braket.

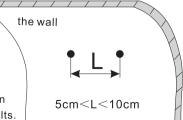


A. The lamp is fixed in the wall

A1. Punch in the wall as L size shown on the right and Lock M12 Expansion Bolts.

#### (LED Tunnel light)



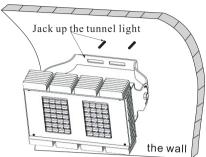



A2. Jack up the tunnel lights, penetrate M12 bolts from the fixed holes bracket, connect with metal bracket, cover the spring washer and cushion, then lock nut. the torsion on the screw is 29 Nm.

#### A3. Angle adjustment

①Jack up lamp body, loosen the adjustable bolt


- ②Loosen bolts, turn the lamp body
- 3 If need to adjust the angle, lock the nuts.

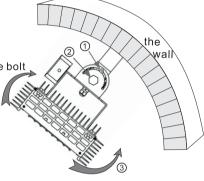

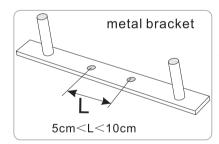


#### B, Fixed in the metal bracket

B1. Punch a hole in the metal bracket as L size shown by left.

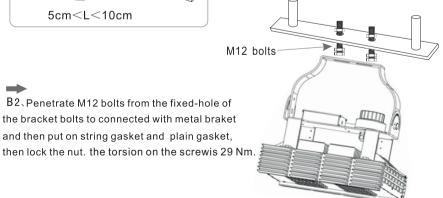





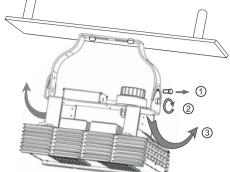

A3、 Angle adjustment

- ①Jack up lamp body, loosen the adjustable bolt
- ②Loosen bolts, turn the lamp body
- 3If need to adjust the angle, lock the nuts.




#### Connection method




It is advised only trained and experience personnel should undertake installation and start up.

(Safety risk if installation and start up is undertaken by others)

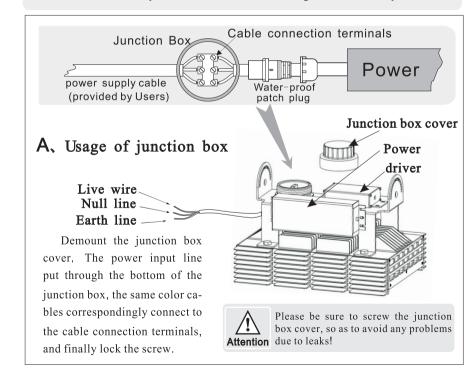


## **LED** Tunnel light



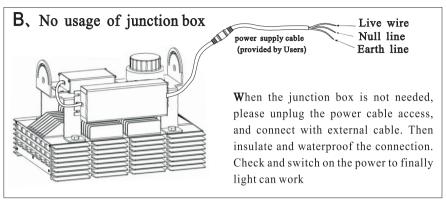

## Replacement for Power and maintenance

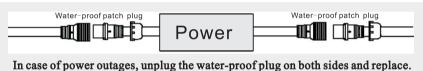

If the light unit malfunctions due to manufacturing quality problem during normal usage, free replacement will be provided within 10 days of purchase.

For light malfunction such as flashing, No light or other defects, please contact professional maintenance points or directly return to the company for repair/replacement. Please ensure only trained and experienced personnel are involved in handling the light.

## ♦ Product BOM list

1. LED Tunnel (including bracket)	- 1Pcs	
2. Installation parts	-1Pcs	
a Expansion Bolts M12*80	2Pcs	
b Bolts M12*80 (including spring washer and plain washer)	2Pcs	
c M12 nut	4Pcs	
3. Warranty card 1Pcs		
4. Certificate	1Pcs	
5. Use Instructions	- 1Pcs	

