



SPECIFICATION

Induction Light

Product Details



Application

- Hotel
- Bus/Subway car
- Amusement park
- Elevator
- Restaurant
- Office

Features

- UVC-300W
- Wave length: 254nm
- UVC Output: 1300~1600uw/cm² in 1m
- AC100~300V
- Lifespan≥60,000hrs
- Timing work 10mins, 15mins, 20mins
- Start with 90s delay, Automatic activation after leaving
- Infrared induction (automatic closing when coming, automatic opening when leaving)

Temperature

Operating: 0 ~ + 40°C

Storage: - 20 ~ + 70°C



Applications



▲ Elevator



▲ Amusement park



▲ Bus




▲ Subway car



▲ Restaurant



▲ Hotel

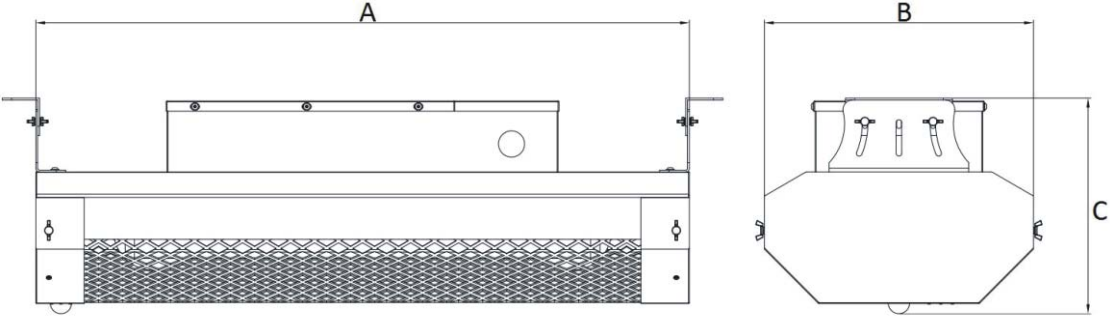

Dimension	A	B	C
700 mm	702 mm	289 mm	230,5 mm

Product Details



18AWG 6FT / 3*1.0mm² 2M cable


UL/EU/AU plug




Technical Data sheet

Item	Power	Dimension	Input	Wavelength	UVC Output	Lifespan	Warranty
UVC-4	300W	702*289*230.5mm	AC100-300V	254nm	1300~1600UW/cm ² in1m	≥60,000hrs	3 years


Surface mount

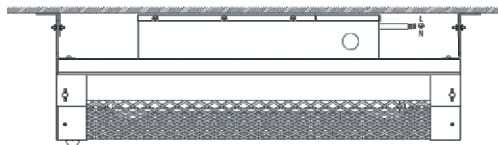

Suspend mount

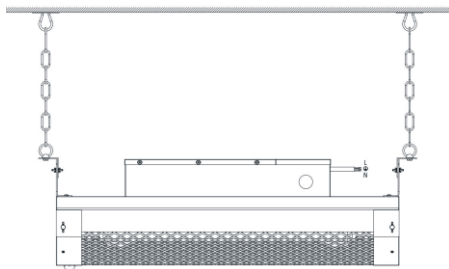

Portable vertical

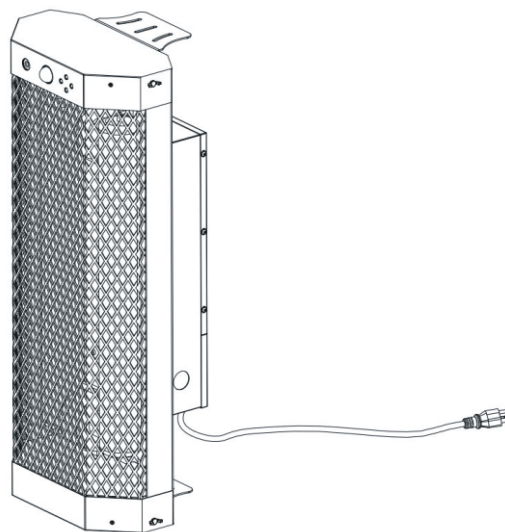




Please note:



Leave the room

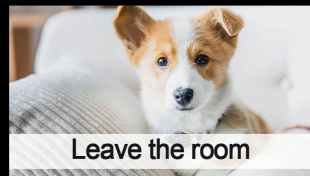

Leave the room

1. To ensure the sterilization effect, please keep the surface of the UV lamp is clean during use. If you find dust or oil on the surface, please wipe and rinse it in time when the power cut off. (Please do not touch the glass tail tube to prevent any damage or break in cleaning procedures.)
2. Please do not approach or look directly into this product during use as the ultraviolet radiation damage for the skin and eyes of humans or animals.
3. Please remove expensive calligraphy and painting, high-grade textile and leather products from the sterilizing area, or carry out shading treatment to avoid damage
4. Please do not put any objects on the product during use to avoid any risks.
5. Please do not use the product in an unstable place or near flammable materials to prevent any damages or causing fire accident.
6. Please do not pull the power wires forcefully or operate or unplug the power plug with wet hands to prevent the risk of electric shock.
7. Please do not touch the heating part of the product with your hands when it is on or just off.
8. Please keep ventilating for at least 30 minutes after disinfection.